COOKTOP PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0

(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

30" GAS FREESTANDING
SELF CLEAN RANGE
SEALED BURNER

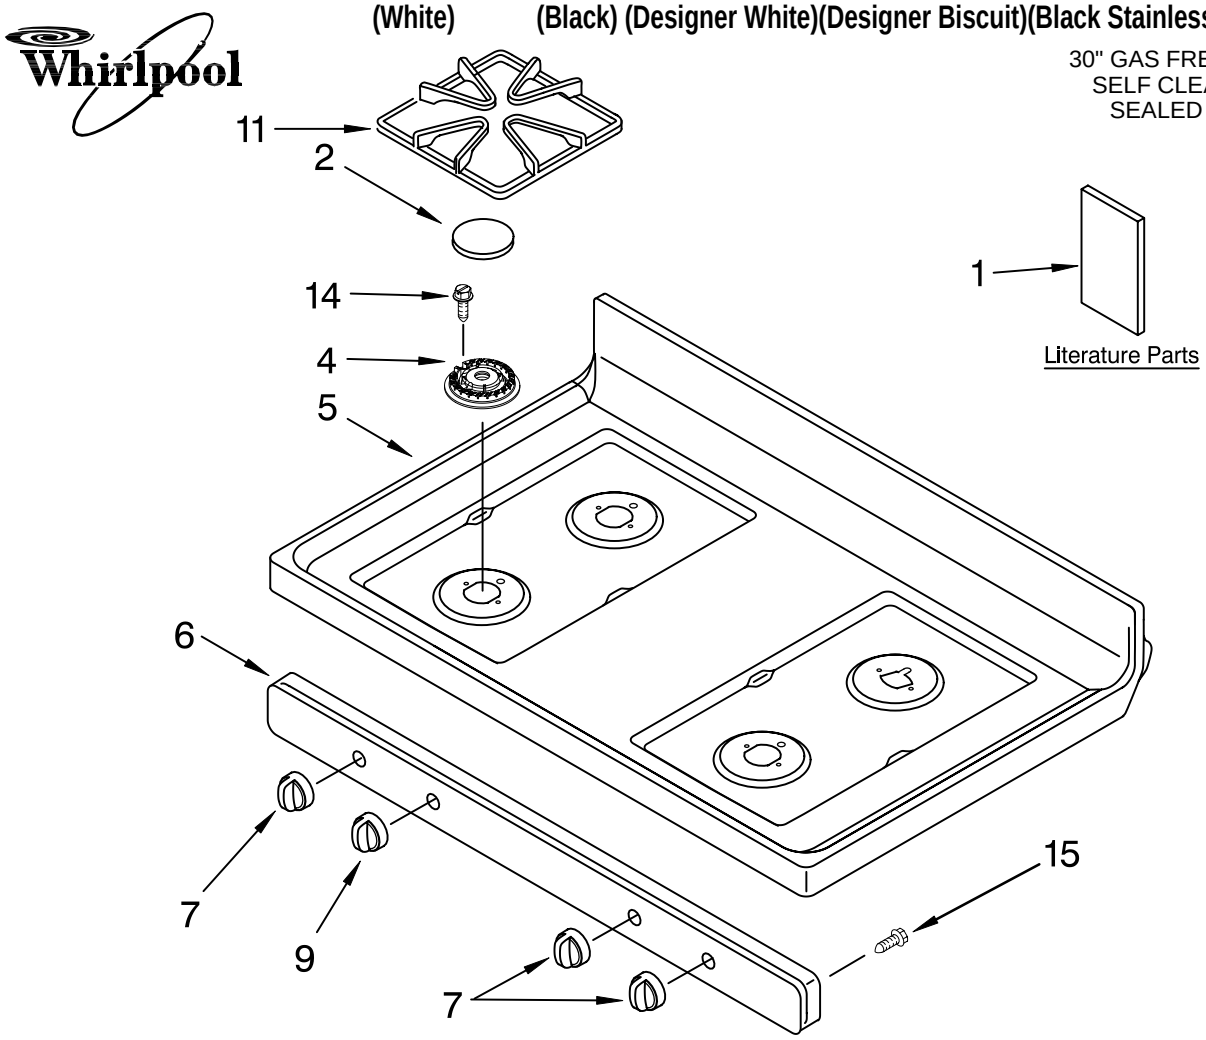

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9758660	Installation Instructions Anti−Tip Template
	8523048	English/Spanish
	9756849	English/French
	9756385	Use & Care Guide
	9755996	Tech Sheet
	3191638	Safer Cooking Tips
2		Cap, Burner
		Left Front
	3191904	Black
	3191905	Grey
	8273345	Espresso
		R. Front, L. Rear
	3191901	Black
	3191903	Grey
	8273344	Espresso
		Right Rear
	3191898	Black
	3191899	Grey
	8273343	Espresso
4		Burner
	4455981	Left Front
	4455980	R. Front, L. Rear
	4455979	Right Rear
5		Cooktop
	8272251	White
	8272743	Biscuit
	8272253	Black
6		Panel, Manifold
	8523855	Black
	8523854	White
	8523856	Biscuit
7		Knob, Control (3)
	8273103	Black
	8273104	White
	8273106	Biscuit
9		Knob, Powerburner
	8273111	Black
	8273112	White
	8273114	Biscuit
11		Grate, Burner (4)
	8522851	Black
	8522850	Grey
	8522853	Espresso
14	3400701	Screw
15	3196557	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0
(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

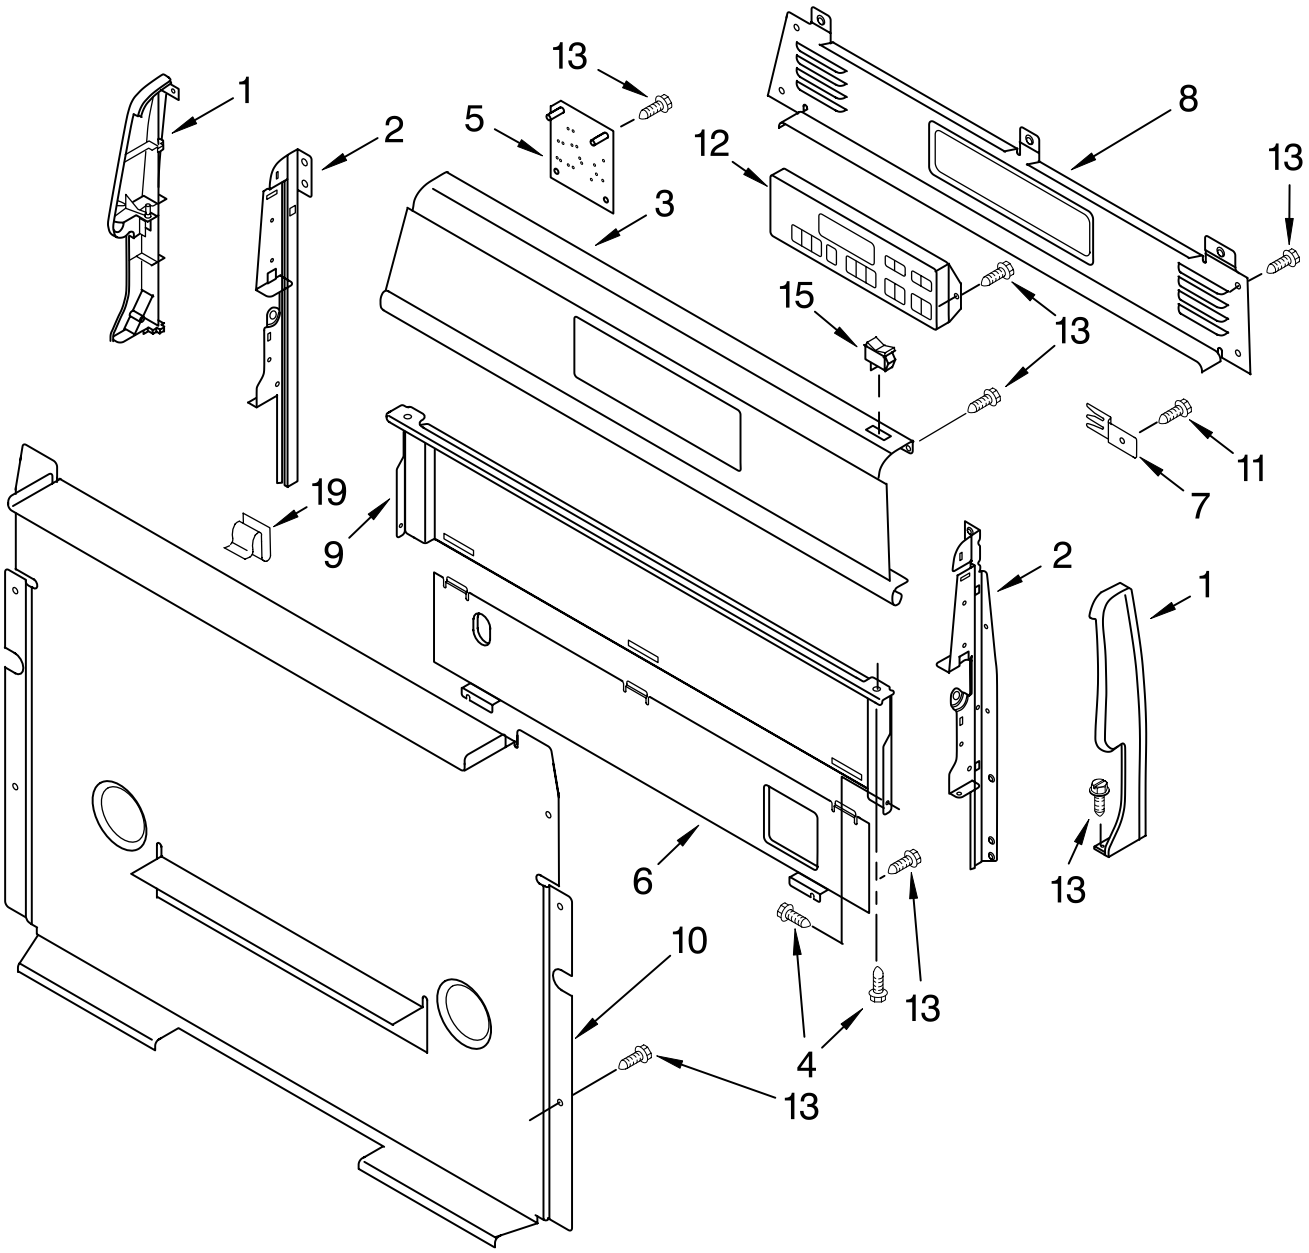

Illus. No.	Part No.	DESCRIPTION
1		Endcap, Left Hand
	3186188	Black
	3186190	White
	8272507	Biscuit
		Endcap, Right Hand
	3186189	Black
	3186191	White
	8272508	Biscuit
2		Support, Endcap
	8523408	Left Hand
	8523409	Right Hand

Illus. No.	Part No.	DESCRIPTION
3		Panel, Backguard
	9758508	Black
	9758507	White
	9758506	Biscuit
	9756757	Stainless
4	4449746	Screw
5	9758080	Module, Spark
6	8053505	Shield, Lower Heat
7	8523412	Bracket, Support
8	9756301	Cover, Upper
9	8053910	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
10	8273132	Cover, Lower
11	3196169	Screw
12		Control, Range
	6610394	Black
	6610395	White
	6610396	Biscuit
13	3196178	Screw
15		Switch, Rocker
	3148564	Black
	3149360	White
	8273501	Biscuit
19	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0

(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

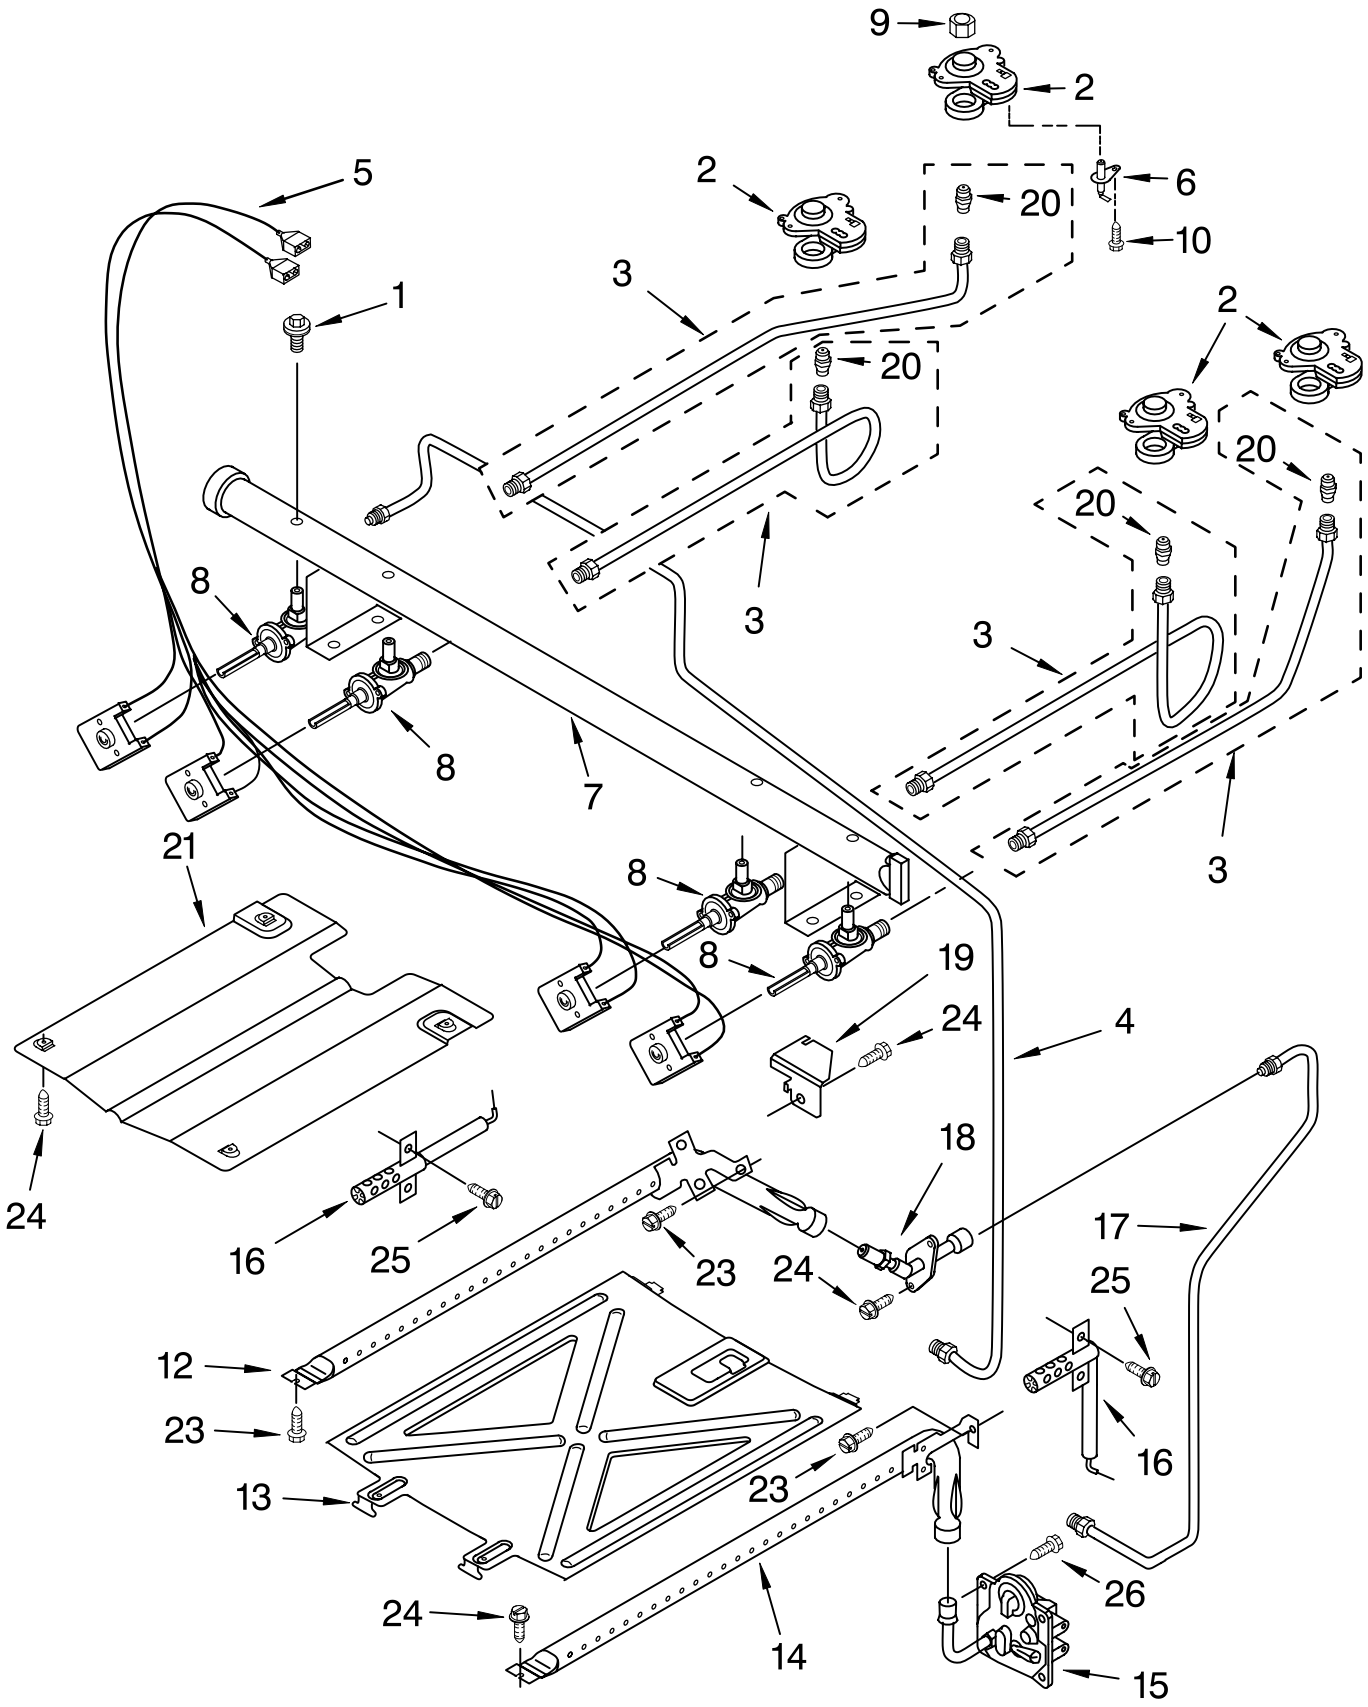

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MANIFOLD PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0
(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8273096	Screw, Valve
2		Burner Base
	8273700	Large (4)
3		Tubing, Burner W/Orifice
	8273693	Left Front
	8273698	Left Rear
	8273695	Right Front
	8273697	Right Rear
4	8523402	Tubing (Manifold to Regulator)
5	8523406	Harness, Igniter (W/Switches)
6	8523793	Electrode (4)
7	8523407	Pipe, Manifold
8		Valve
	9757218	LF − RF − LR
	8273004	Right Rear
9	8273060	Nut (4)
10	8273062	Screw (4)
12	8054078	Burner, Broiler
13	8053970	Spreader, Flame (Oven)
14	9758078	Burner, Bake
15	8054079	Valve, Gas
16		Igniter
	8054129	Broil
	9758079	Bake
17	8272222	Tubing (Broiler Fitting To Valve)
18	3186489	Fitting, Broiler
19	8272403	Cover, Igniter
20		Orifice, Burner
	8273064	Left Front
	8273066	Right Front
	8273065	Left Rear
	8273067	Right Rear
21	8053262	Spreader, Flame (Broiler)
23	3196265	Screw
24	3196176	Screw
25	3196385	Screw
26	3400016	Screw

Following Parts Not Illustrated

	8523418	Spuds, LP Gas (Kit of 4)

CHASSIS PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0

(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

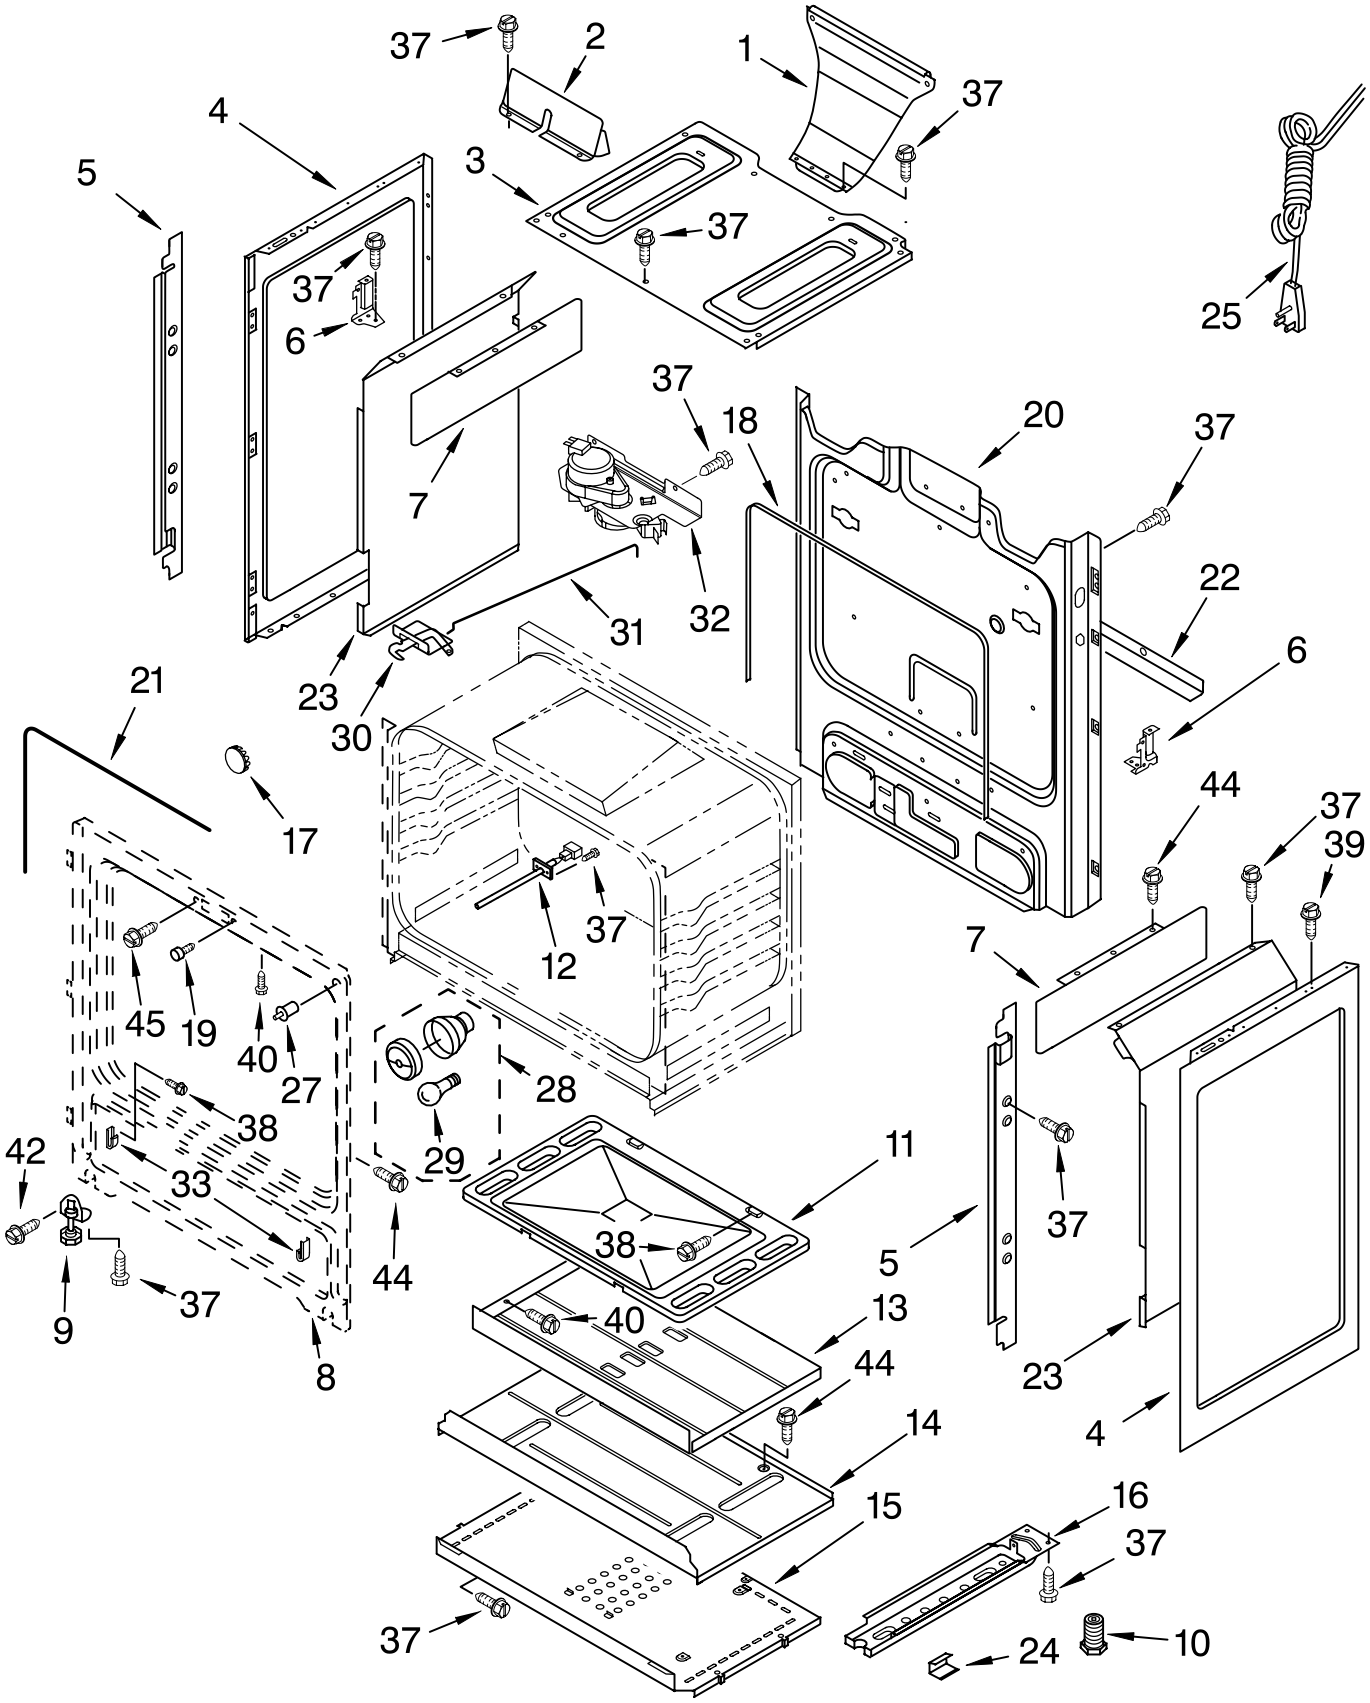

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0
(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	8523263	Flue Box
2	8272747	Shield, Flue
3	8273036	Burner Box
4		Panel, Side (2)
	8053830	White−Textured
	8272519	Biscuit−Textured
	8053832	Black−Textured
5	8524111	Shield, Heat (2)
6	8523249	Brkt, Manifold Mtg
7	3196136	Shield, Heat (2)
8		Frame, Front (Non−Serviceable)
9	3196037	Foot, Front (2)
10	312701	Foot, Rear (2)
11	3195097	Bottom, Oven
12	8273902	Sensor, Oven
13	8053967	Baffle, Burner
14	8053969	Shield, Heat
15	8053968	Shield, Lower
16	8053335	Rail, Base (2)
17	3196439	Plug, Button
18	8524109	Seal, Oven Flange
19	9758701	Spacer, Door
20	9757098	Back, Main
21	8522416	Seal, Oven
22	8053971	Brace, Main Back
23		Retainer, Insul.
	3196523	Left Hand
	3195726	Right Hand
24	3196576	Clip, Panel (6)
25	9757891	Cord, Power
27	3195993	Switch, Door
28	3196701	Light Socket Assy
29	311255	Bulb, Oven Light
30	3196119	Latch, Door
31	3196960	Rod, Latch
32	3196958	Latch−Mtr
33	3195546	Glide, Drawer
37	3196178	Screw
38	3196152	Screw
39		Screw
	3196166	White
	8281194	Biscuit
40	3196176	Screw
42	3196179	Screw
44	3196177	Screw
45	3196168	Screw

INSULATION

	8524099	Insulation, Wrap
	8272614	Insulation, Back
	8272613	Insulation, Vent

DRAWER & BROILER PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0
(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

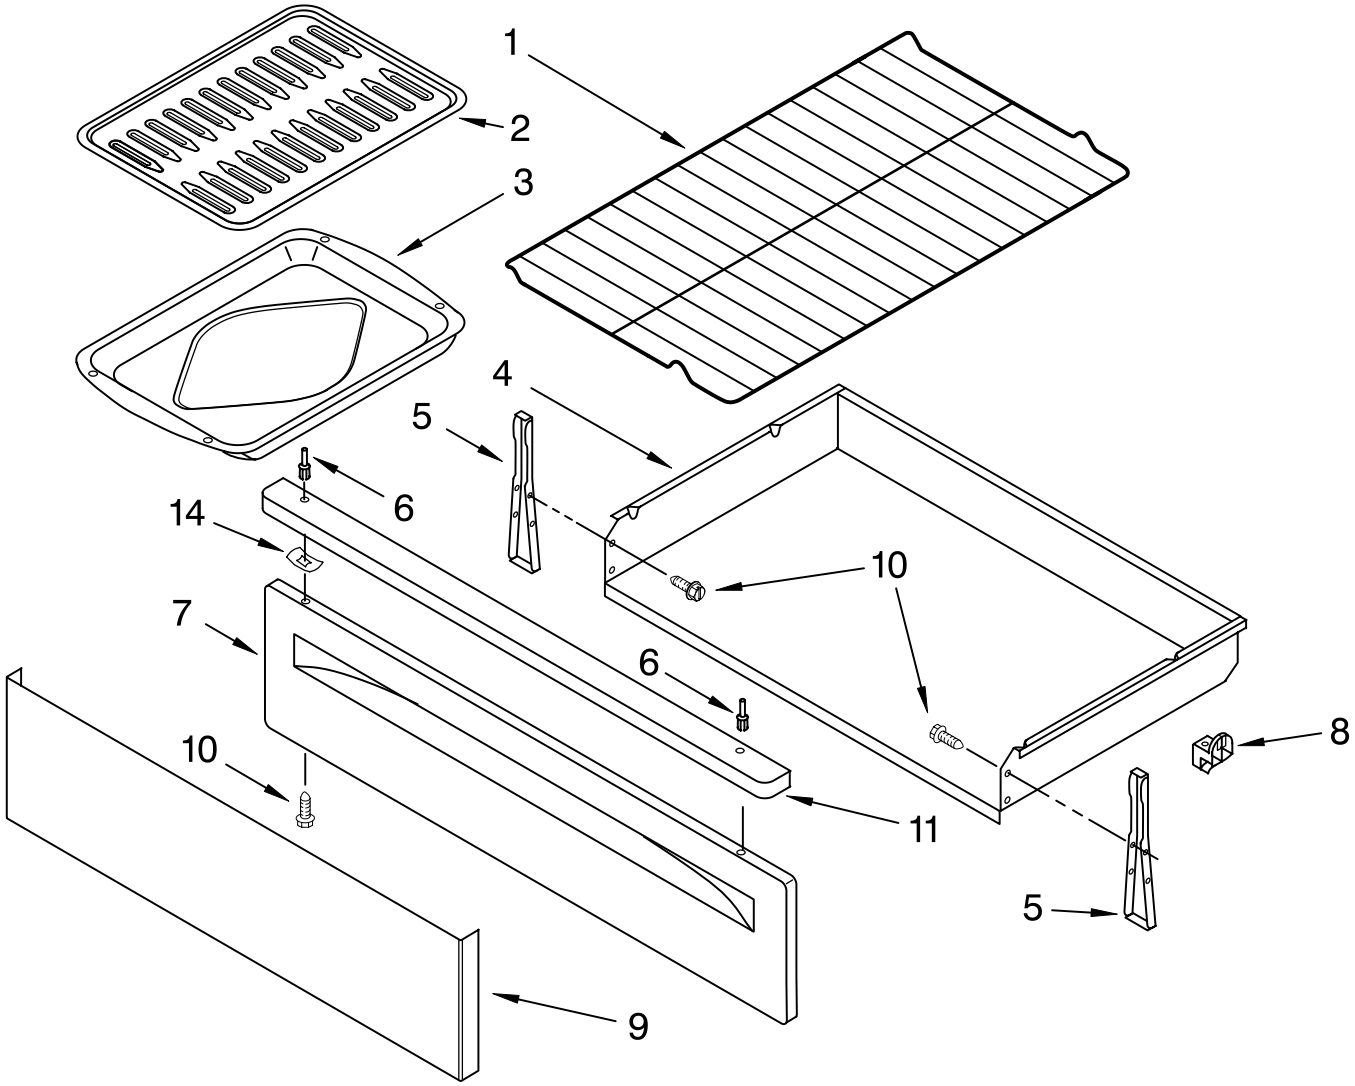

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272606	Drawer, Storage
5	3196817	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053336	White
	8272502	Biscuit
	8053338	Black
8	8053334	Spacer, Glide
9	9755797	Panel, Stainless
10	3196168	Screw
11	9757237	Handle, Drawer (Stainless Model)
14	9781235	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0

(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

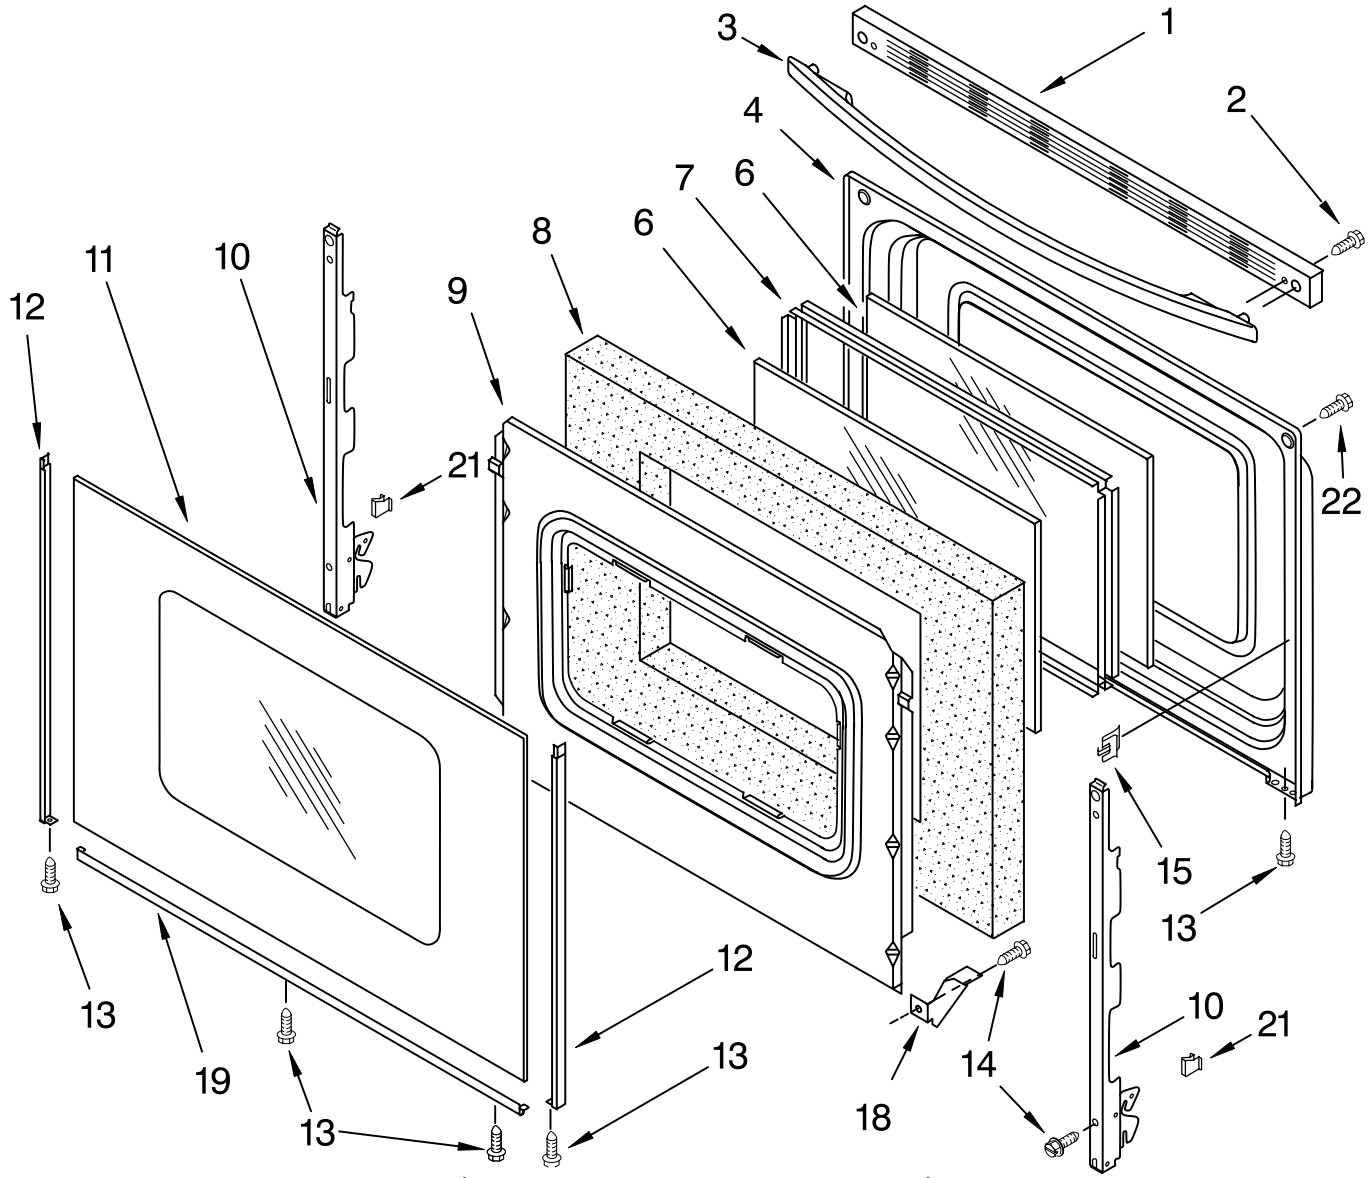

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	3196819	Black
	8522433	White
	8522434	Biscuit
2	3196164	Screw
	8272243	Stainless Model
3		Handle, Door
	3195922	Black
	8522444	White
	8522445	Biscuit
4	3186292	Liner, Door
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	3186297	Retainer, Insul.
10	8053807	Hinge, Door
	8272822	Stainless Model
11		Glass, Outer Door
	9756414	Black
	9756415	White
	9756416	Biscuit
	9756435	Stainless Model
12		Trim, Door Side
		Left Hand
	8523171	Black
	8523172	White
	8523173	Biscuit
		Right Hand
	8523165	Black
	8523166	White
	8523167	Biscuit
13	3196160	Screw
14	3196165	Screw
15	3196025	Clip, Door Glass
18	3196794	Bracket, Window(2)
19		Trim, Bottom
	8523177	Black
	8523175	White
	8523178	Biscuit
	8523180	Stainless Model
21	3196925	Clip, Door Stop
22	3196161	Screw

OPTIONAL PARTS

For Models: SF368LEPW0, SF368LEPB0, SF368LEPQ0, SF368LEPT0, SF368LEPS0
(White) (Black) (Designer White)(Designer Biscuit)(Black Stainless)

Illus. No.	Part No.	DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c

REFINISHING MATERIAL

242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')

ANTI−TIP KIT

3176830	Anti−Tip Kit

WIRING HARNESS PARTS

8523424	Harness, Main (EOC Pyro)
8524207	Harness, Main Bake/Broil Ign.
8523599	Harness, Wire (Cooktop Spark)
3196896	Clip, Wire
3196520	Clip, Wire
3195927	Wire, Tie
313438	Clip, Harness
3196173	Screw
3196696	Clip, Harness

Miscellaneous

3196897	Pin Kit−Dr Removal